


SEA EAGLE.com

PaddleSki Yoke Attachment Instructions

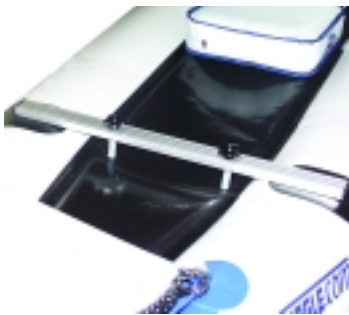

The PaddleSki now features three aluminum yokes to support the floor. The fore and aft yokes come preassembled from the factory, but the center yoke should be attached manually.



Now place the shorter yoke below the hull lined up with the holes.



Place the short aluminum bar on top of the floor between the two black patches (on 2002 model PaddleSkis - for older models place equidistant between front and rear yokes)

Mark with a pen.



With the PaddleSki partially deflated, insert the screw through the washer and then slide through the bottom aluminum yoke and floor. Place the grey plastic tube around the screw.



Using an awl or small knife, cut a hole in the floor following the outline of the hole marked in the previous step.



Place the top (longer) aluminum yoke above and slide the screw through. Screw the plastic knurled nut securely above. Repeat on the other side.

This is a one time installation. You can roll up your paddleski with all three yokes in the future.