


Easy Setup Instructions

BF2.3D

This outboard is shipped **without oil** in the engine. You must **add oil** before use.





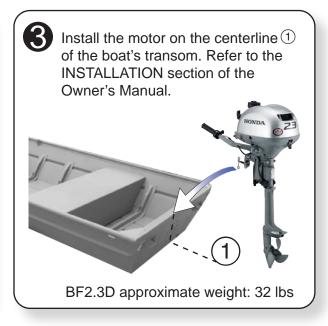


The antiventilation plate ① of the motor should be 0 ~ 2 inches below the bottom of the boat. Be sure the engine under case ② is above the water level when the boat is fully loaded. If not, contact your retailer.

2

0 ~ 2 inches (0 ~ 50 mm)





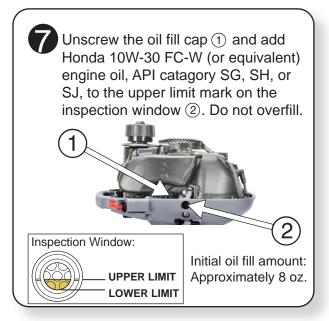





Starting The Engine & Break-in

Refer to the OPERATION section of the Owner's Manual and follow the instructions for starting the engine.

The break-in procedure allows the moving parts to wear in smoothly for best performance and long service life.

For the first 10 hours, run the outboard motor at low speed, and avoid full-throttle operation.

Registering Your Outboard Motor

Register your outboard motor to receive important service information and updates.

Visit marine.honda.com and click on Service & Support, then **Product Registration**.

Have a question or a problem?

Most questions or concerns can be answered by reading the Owner's Manual or contacting the retailer where you purchased your Honda outboard motor.

Where is a dealer near me?

You can find the closest Authorized Honda Marine Dealer to you by visiting marine.honda.com and clicking on Find A Dealer.