

Assembly Instructions Swivel Seat Fish Rig (SSFR) Fast Track & Explorer

Kit Includes: Aluminum seat board, front crossbar (30"), rear rod holder crossbar (34"), swivel seat with built-in swivel plate, Scotty Baitcaster Rod Holders with bases, straps and hardware.





Straps with Buckle (trim to size)

Frame Hardware:

- 4 1/4 x 2" Phillips Head Crossbar Bolts
- 4 Flat Washers
- 4 Threaded Knobs

Seat Hardware:

- 4 1/4 x 1" Hex Head Bolts
- 4 Wingnuts

Rod Holder Screws

8 #6 x 1" Phillips Head (Needed: #2 philips head screwdriver)

One-Time Setup: Attach the Scotty Rod Holder bases to rear rod holder crossbar. Larger 34" crossbar with predrilled holes at each end.

Use a phillips head screwdriver to screw the Scotty bases onto the rod holder crossbar with the #6 stainless steel screws. This a one-time task, the rod holders can be inserted into the base and then removed between uses.



Frame Assembly

Attach the seat swivel to the aluminum seat board using the hex head bolts and wing nuts.



Next attach the front and rear crossbars to the aluminum seat board. The bolts come up through the bottom of the bars and through the plate. Place the washer over the bolt on top of the plate. Leave the first knob loose until the second bolt is inserted.



Set the frame on the boat with the front bar just in front of the middle D-rings.



FT and Explorer Run the strap as shown below:

- Through the D-ring located behind the rig
- Over the rod holder bar
- Through the D-ring behind the front bar
- Under and over the front bar
- Back through the D-ring
- Through the buckle and pull tight
- Repeat on the other side



Tandem 465FT shown here with optional motor and motor mount. The strap goes under then over the front bar and over the rear rod holder bar. The front D-ring is just behind the bar.



300x




Scotty Bait Caster Rod Holder

To install the rod holder, align the slot in the peg with the key in the base and slide into base. Lift slightly to spin the rod holder. Press down fully to lock in position.

To remove the Scotty Bait Caster, lift and turn until the key slides out of the groove in the base.

To adjust the rod angle, loosen the large bolt on the side, pull the pin clear of the grooves, adjust the angle, and retighten the bolt.

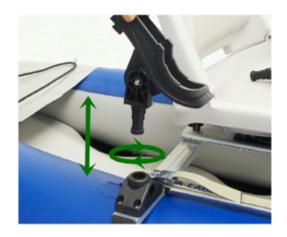

We hope you enjoy your Sea Eagle and Fishing Rig. Use caution while out on the water, the Fishing Rig raises the center of gravity making the boat tippier. This is especially true of a tandem setup. Tether all loose items to avoid losing them, and stow items like phones and electronic key fobs in a waterproof bag.