

375fc FoldCat Canopy Assembly & Installation




Lay out the contents





Lay the canvas smooth side up (upside down).

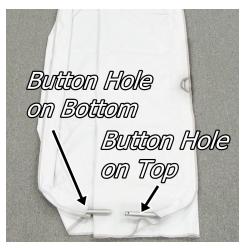

Run the curved bars through their pockets on the edge of the canvas.



Insert side rods into curved bars. Pins will engage the holes.



Hardware may be shipped as shown here.

If not, run bolt through brass spacer.
Place steel pin on spacer
Place a washer on the bolt
Place the rod on the bolt
Place second washer then black knob.



Remove the ring and drop pin into oarlock.

Replace the ring on the pin to lock into oarlock.



Clip straps to the edge of the aluminum benches.